



Best Practices



Daily Cleaning - AccuTemp Steamer

The purpose of daily cleaning is to remove all moisture from the AccuTemp Steamer.

- Wait until steamer water has cooled to below 70° F before beginning cleaning process.
- Vinegar may be used for cleaning spills, never use dish soap, sanitizer, or any chemical cleaner.
- Steamer is a two-compartment unit, complete cleaning for the top and bottom sections.



STEP 1

The steamer door is kept open when steamer is off to allow moisture to escape.



STEP 2

Let steamer water cool overnight. For safety, water must be cooled to below 70° F. before cleaning.



STEP 3

Place hotel pan at the bottom of steamer to avoid spills when the release valve is opened.



STEP 4

Open the release valve to drain water into the drain pan.




STEP 5

Empty the hotel drain pan each time the water level reaches half full.



STEP 6

Remove left pan rail and lift steam collector to wipe dry and remove all moisture from the bottom of steamer.

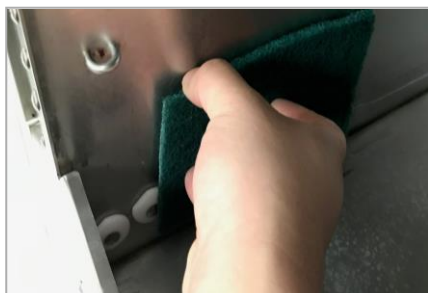

STEP 7

Scrub the water sensors with a scouring pad then wipe dry.



STEP 8

Replace steam collector and pan rail. Wipe all surfaces inside the steamer with a dry wiper towel.



STEP 9

Wipe the rubber gasket around the door with a dry wiper towel to remove all moisture.