

MAIN BASE STATION

RADIO GUIDE

EMERGENCY MAIN BASE STATION

Channel 1 – School Site Local Campus Channel (SCHOOL NAME)

*When you transmit: This channel will communicate with your local campus and assigned School Sites during the Inter Campus Radio Test.**

Channel 2 – School Police Channel (POLICE DIG)

When you transmit: This channel will communicate with School Police Dispatch

*** During the Inter- Campus Radio Test:**

In order for your Assigned Elementary Schools Sites to reach you Via Two Way Radio.

1. They MUST be using their Emergency Radio Located in the Main Office.

2. They MUST be on Channel 2 and it shows EMERGENCY on the display

DISPLAYS CHANNEL
INFORMATION

VOLUME
CONTROL

CHANGES
CHANNELS

1. LOCAL CAMPUS
(SCHOOL NAME)
2. SCHOOL POLICE
(POLICE DIG)

GREEN – NORMAL

YELLOW – BATTERY CHARGING
AFTER POWER OUTAGE

RED - NOT NORMAL – PLEASE
CONTACT THE RADIO UNIT

BUTTON WITH
LIGHTNING BOLT



PTT- PUSH AND HOLD
TO TALK. RELEASE TO
LISTEN



HANDHELD BASE STATION

RADIO GUIDE

*EMERGENCY
HANDHELD*

BASE

Channel 1 – School Site Local Campus Channel

When you transmit: This channel will communicate with your local campus. Please use Stationary Base Station in the Main Office to call you assigned Sites during the Drill.

Channel 2 – School Police Channel (POLICE DIG)

When you transmit: This channel will communicate with School Police Dispatch

Charging your Battery:

Charge battery with Radio OFF


Radio will hold a charge for 10-12 Hours with a FULL charge.

ON/OFF
KNOB &
VOLUME
CONTROL




CHANNEL CONTROL
KNOB

PTT- PUSH AND HOLD
TO TALK.
RELEASE TO LISTEN

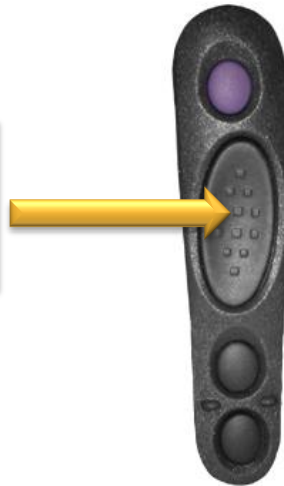

PUSH TO DISPLAY
BATTERY STATUS

RATED CAP%
PERCENTAGE OF
BATTERY CHARGE

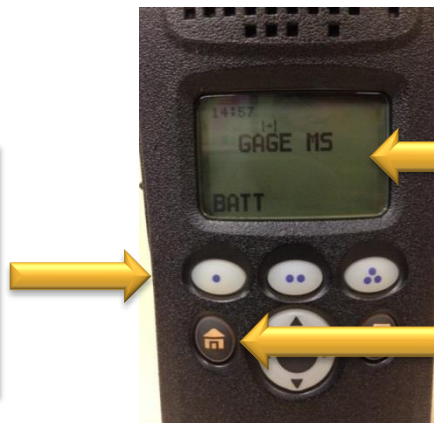

DISPLAY'S CHANNEL
INFORMATION

HOME BUTTON: CLEARS
OUT OF BATTERY
STATUS SCREEN

TRUCK OPERATIONS

RADIO GUIDE

*Two-Channel Radio
installed in your trucks.*

Channel 1 – System District Wide

*When you transmit: All
Radios on that channel will
hear your transmissions
and this includes dispatch
in Truck Operations.*

Channel 2 – Local

*When you transmit: Only
local trucks on the same
channel will hear your
transmissions.*

**MICROPHONE
PTT- PUSH TO
TALK &
RELEASE TO
LISTEN**

**ON/OFF
VOLUME**

CHANGES CHANNEL



P1- Monitor: If the YELLOW Light is on. Press this button once to turn off. It should always be off.

P2- Not Used.

**ANY TECHNICAL QUESTIONS SHOULD BE DIRECTED TO THE ITD RADIO UNIT
REACH US ON THE WEB LAUSD.NET/OFFICES/RADIO UNIT**

MAINTENANCE & OPERATIONS
EMERGENCY RESPONSE

CHANNEL SELECT

ON/OFF & VOLUME

not programmed




display: channel name & ID#

Zones-Push button under zone and use

Left & Right arrows to Scroll

HOME: (hold 2 seconds)TAKES YOU TO

M & O SYSTEM

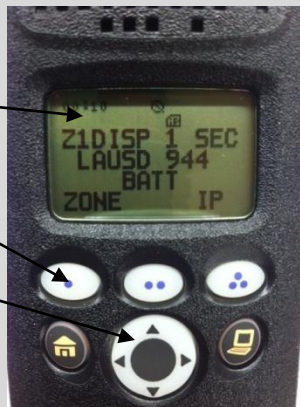

Display Light Button

PUSH TO TRANSMIT

RELEASE TO RECEIVE

MONITOR

NOT USED

