



Best Practices for Operating the Robot Coupe CMP 250 Immersion Blender

The purpose of this process is to outline safety practices when utilizing an immersion blender to ensure and promote safety for all Food Service employees.

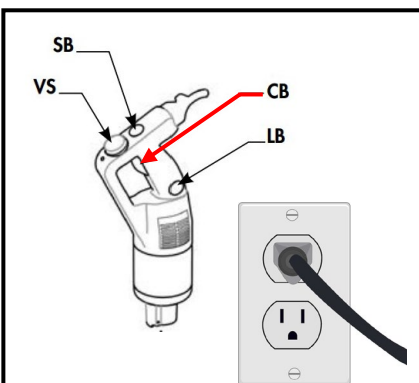

Step 1: Check that the *Control Button* is in the released position. Plug in Cord to power supply. **Do not** use extension cord for safety purposes.

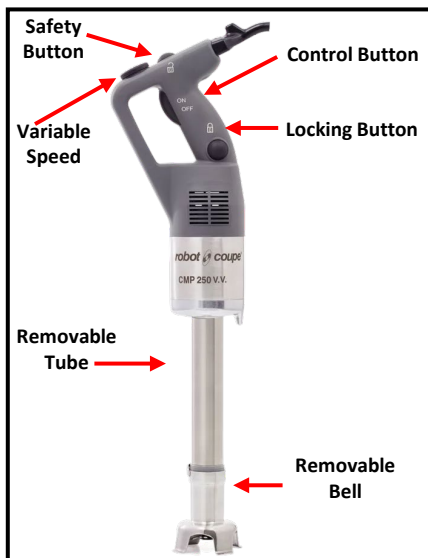


Step 2: Before turning on the immersion blender insert tube into container with the bell/whisk completely immersed.



Step 3: Press and hold the safety button (1)



Step 4: Keep safety button (1) pressed and press the ON/OFF AKA Control button (2).

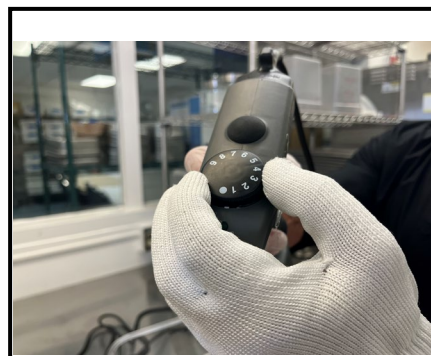

Step 5: Select desired speed setting.



Step 6: Engage the Locking Button (3) to keep continuous use.



Step 7: To disengage, press the ON/OFF (2) to release hold function and turn off motor. Remove immersion blender from container and unplug.



For safety: Do not submerge past the dotted line. Submerging past the dotted line can result in damage to the unit.